



Birlea

Suppliers of inspiration

Vendor: S000139



ASSEMBLY INSTRUCTIONS EDGEWARE TV UNIT

IMPORTANT: READ THESE INSTRUCTIONS CAREFULLY BEFORE ASSEMBLING OR USING YOUR EDGEWARE TV UNIT.


PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.


HEALTH & SAFETY:

DO NOT use this item if any parts are missing, damaged or worn.
DO NOT use this item unless all fixings are secured.
Please keep small parts out of reach of children
Always use on a level, even surface.

CARE & MAINTENANCE:

Assemble in the room of use
Assembly should be carried out with this item laying flat, not standing upright.
Assemble on a soft, clean surface to prevent damages.
To remove the printed numbers on the pieces, use the eraser provided
Periodically check all screws & fixings to ensure they are secure.
DO NOT push the item as this will damage the base.
Always lift the item with two people to reposition.
Keep any sharp objects away from the item.

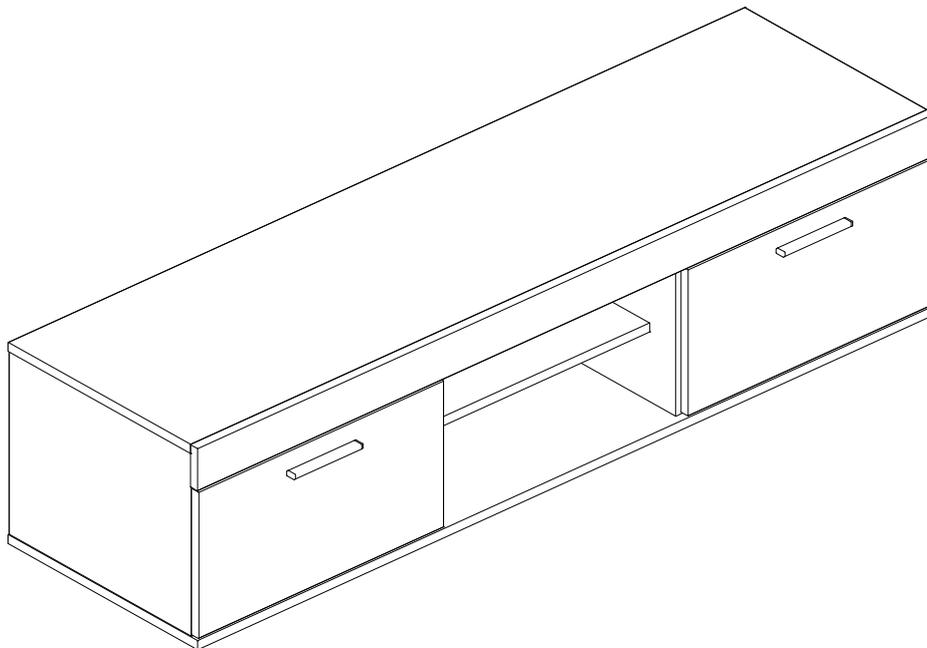

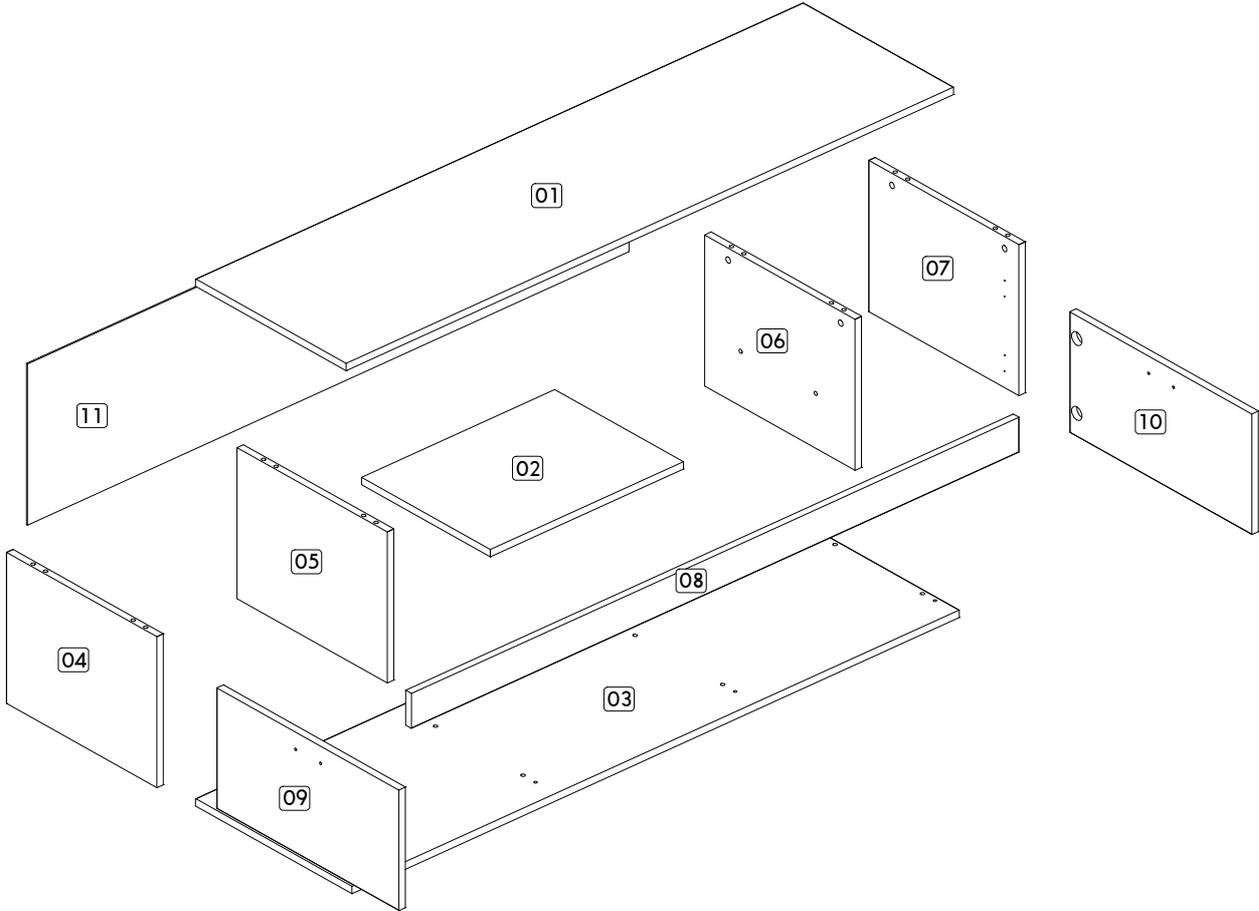


Parts List			
Part	Description	Box	Qty
1	Top Base	1	1
2	Move Shelf	1	1
3	Bottom Base	1	1
4	Left Side	1	1
5	Left Division	1	1
6	Right Division	1	1
7	Right Side	1	1
8	Frame	1	1
9	Left Door	1	1
10	Right Door	1	1
11	Backboard	1	1


**** You will need a small mallet and a screwdriver for assembly.**

Hardware List		
Part	Description	Qty
A	8 x 30 mm Wooden Dowel	16
B	3,5 x 14 mm Screw	33
C	3,5 x 25 mm Screw	4
D	4,5 x 45 mm Screw	8
E	Simple Minifix Screw	8
F	Cam Lock	8
G	Metal Bracket 46 mm	4
H	Hinge Part 1	4
I	Hinge Part 2	4
J	10 x 10 mm Tack	34
K	Plastic Foot	6
L	Shelf Bracket	4
M	3,5 x 20 mm Screw	6
N	Handle	2
O	Strap	1
P	Bushing	1
R	5 x 60 mm Screw	1


Step 1: Insert hardware parts A,L and E using small mallet and a screwdriver (not provided).
DO NOT use any power tools as this may damage the frame and will invalidate any claim.

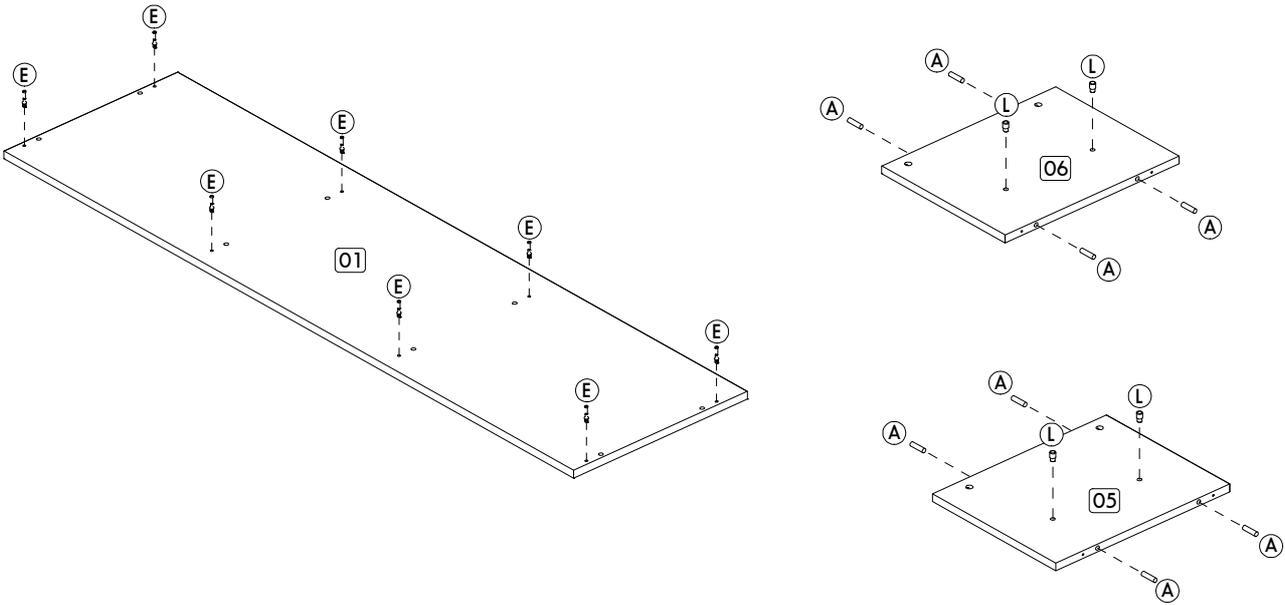


Step 2: Attach hardware part I to the left door (9) and right door (10) using hardware part B with a screwdriver (not provided).
DO NOT use any power tools as this may damage the frame and will invalidate any claim.

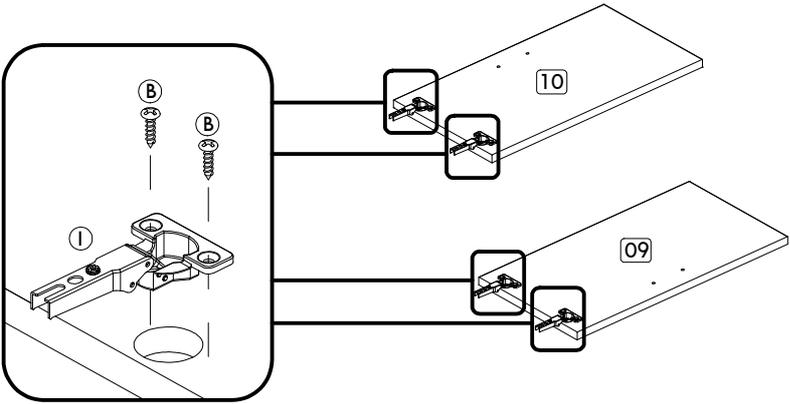



Step 3: Attach hardware part H to the left side (4) and right side (7) using hardware part B and screwdriver (not provided). Insert hardware part A using a small mallet (not provided).
DO NOT use any power tools as this may damage the frame and will invalidate any claim.

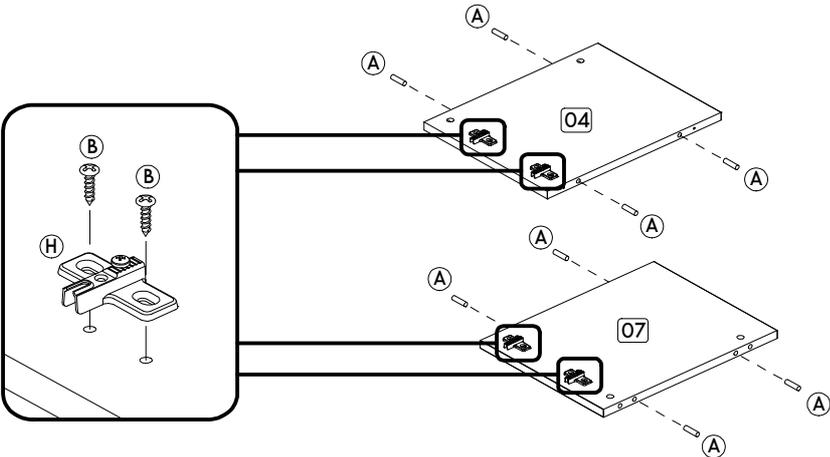


Step 4: Attach hardware part G to the frame (8) using hardware part B and a screwdriver (not provided). **DO NOT use any power tools as this may damage the frame and will invalidate any claim.**

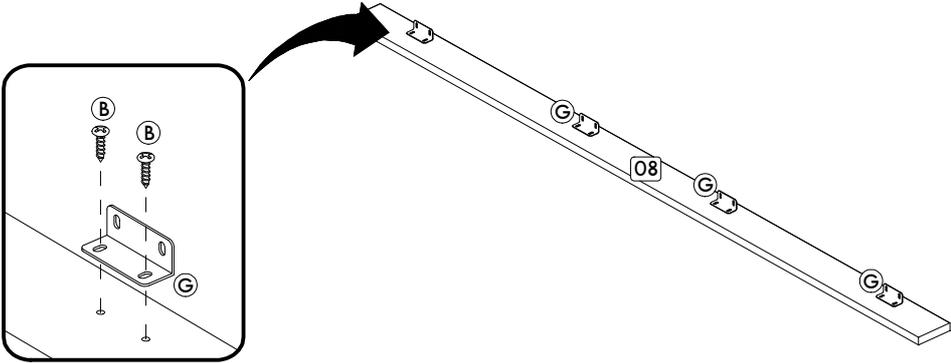


Step 5: Attach the left side (4), left division (5), right division (6), right side (7) to the top base (1) using the hardware part F and a screwdriver (not provided) **DO NOT use any power tools as this may damage the frame and will invalidate any claim.**

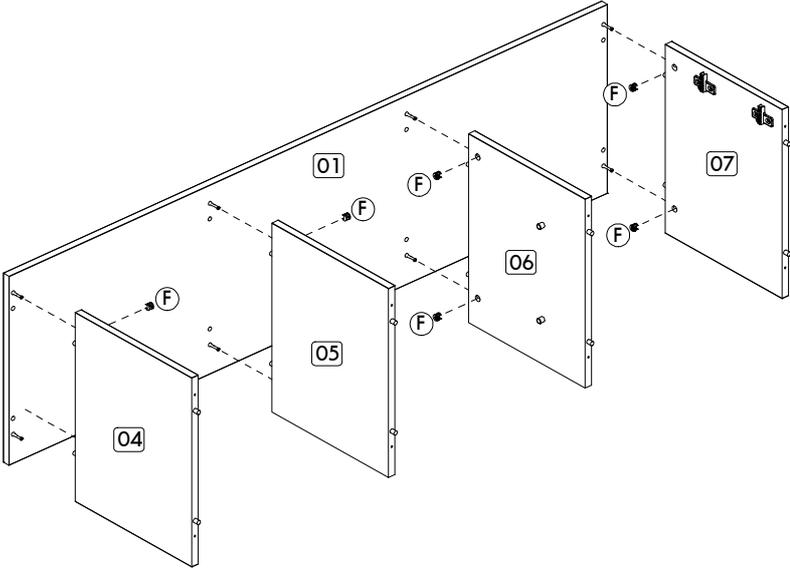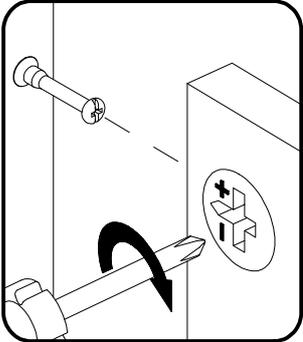



Step 6: Attach the hardware part K to the bottom base (3) using hardware part M and a screwdriver (not provided).
DO NOT use any power tools as this may damage the frame and will invalidate any claim.

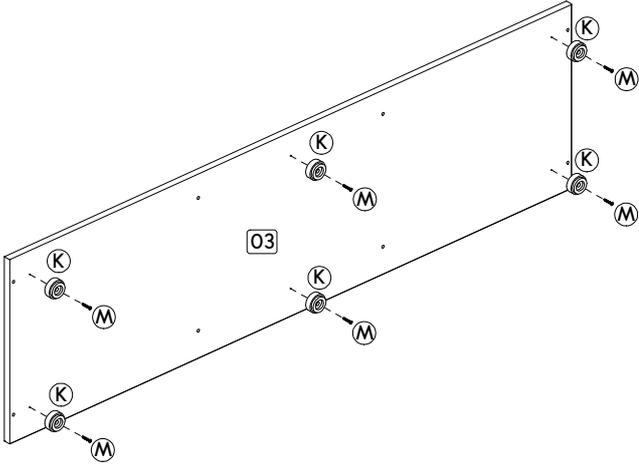


Step 7: Join the two sections together using hardware part D and a screwdriver (not provided).
DO NOT use any power tools as this may damage the frame and will invalidate any claim.

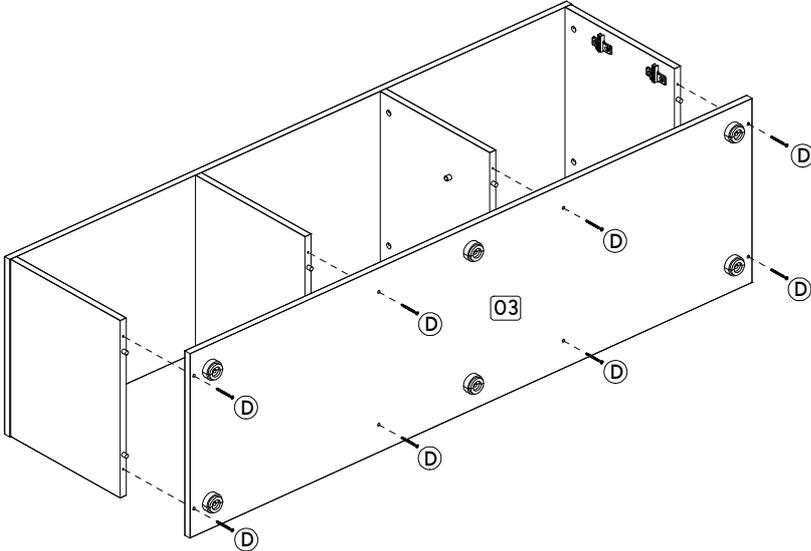



Step 8: Attach the frame (8) using de hardware parts G,B and a screwdriver (not provided).
DO NOT use any power tools as this may damage the frame and will invalidate any claim.

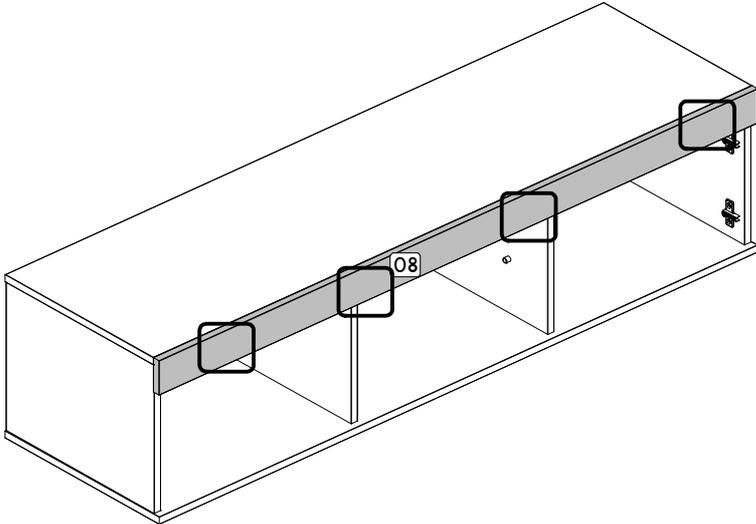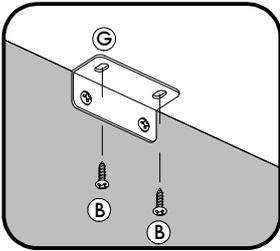


Step 9: Attach the backboard (11) using the hardware part I and a small mallet (not provided).
DO NOT use any power tools as this may damage the frame and will invalidate any claim.

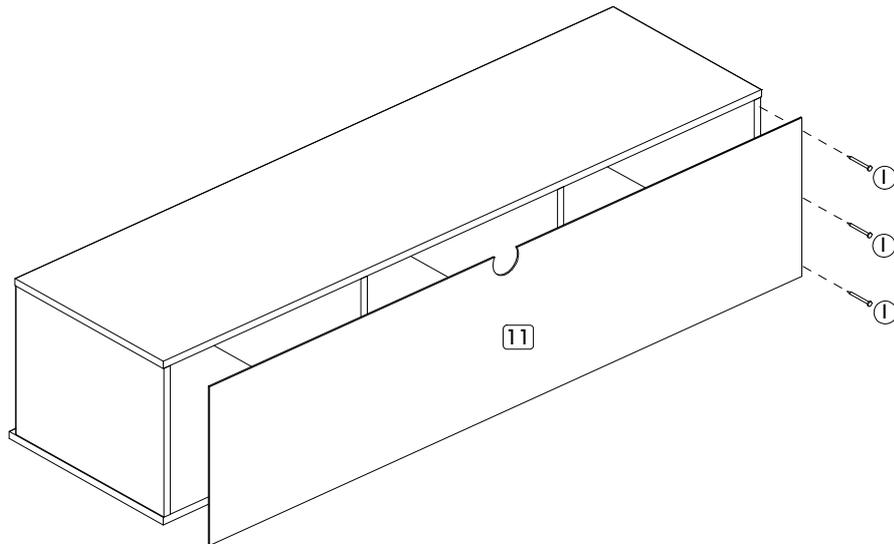


Step 10: Attach hardware part N to the left door (9) and right door (10) using hardware part C and a screwdriver (not provided), then attach the doors to the sides, then put the move shelf (2).
DO NOT use any power tools as this may damage the frame and will invalidate any claim.

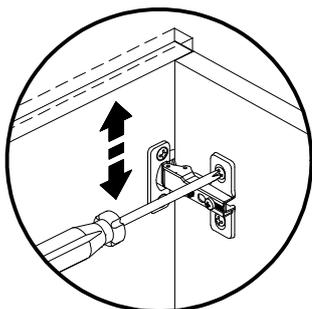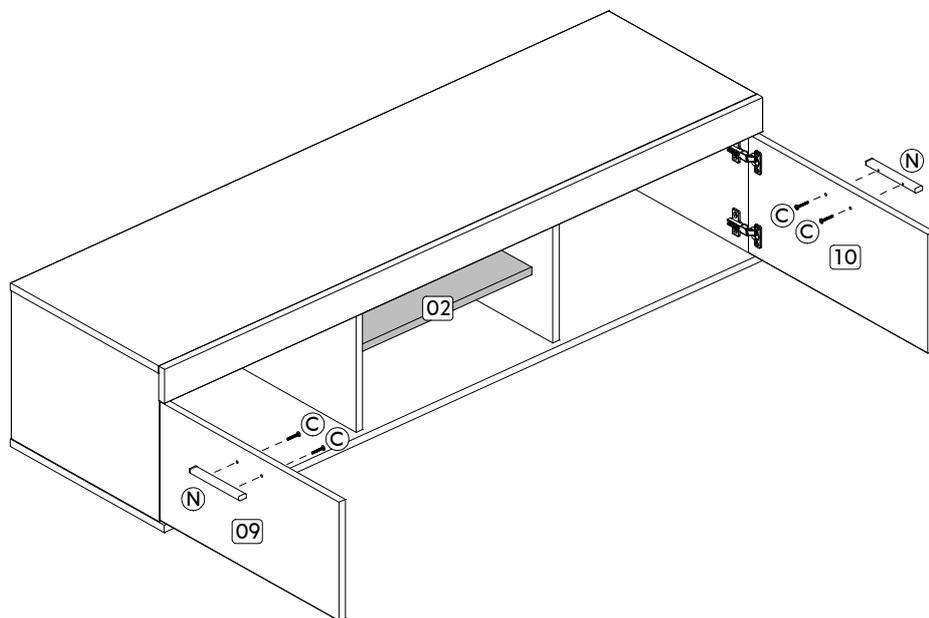

Vertical Adjustment

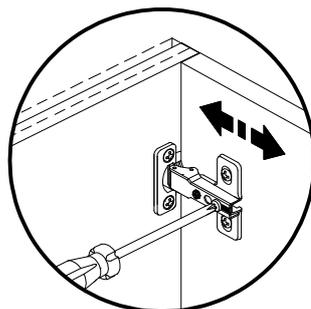


Depth Adjustment

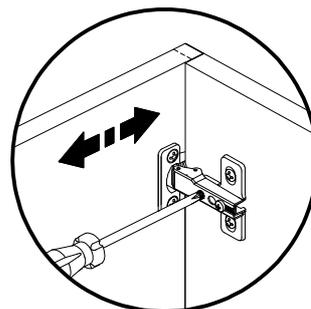

Horizontal Adjustment

Step 11: To secure the item to the wall use hardware parts O, P and R using a screwdriver (not provided). Then attach hardware part B to the item with a screwdriver (not provided). **DO NOT use any power tools as this may damage the frame and will invalidate any claim.** Birlea Furniture advise you use the wall straps provided to further enhance the safety of this product.

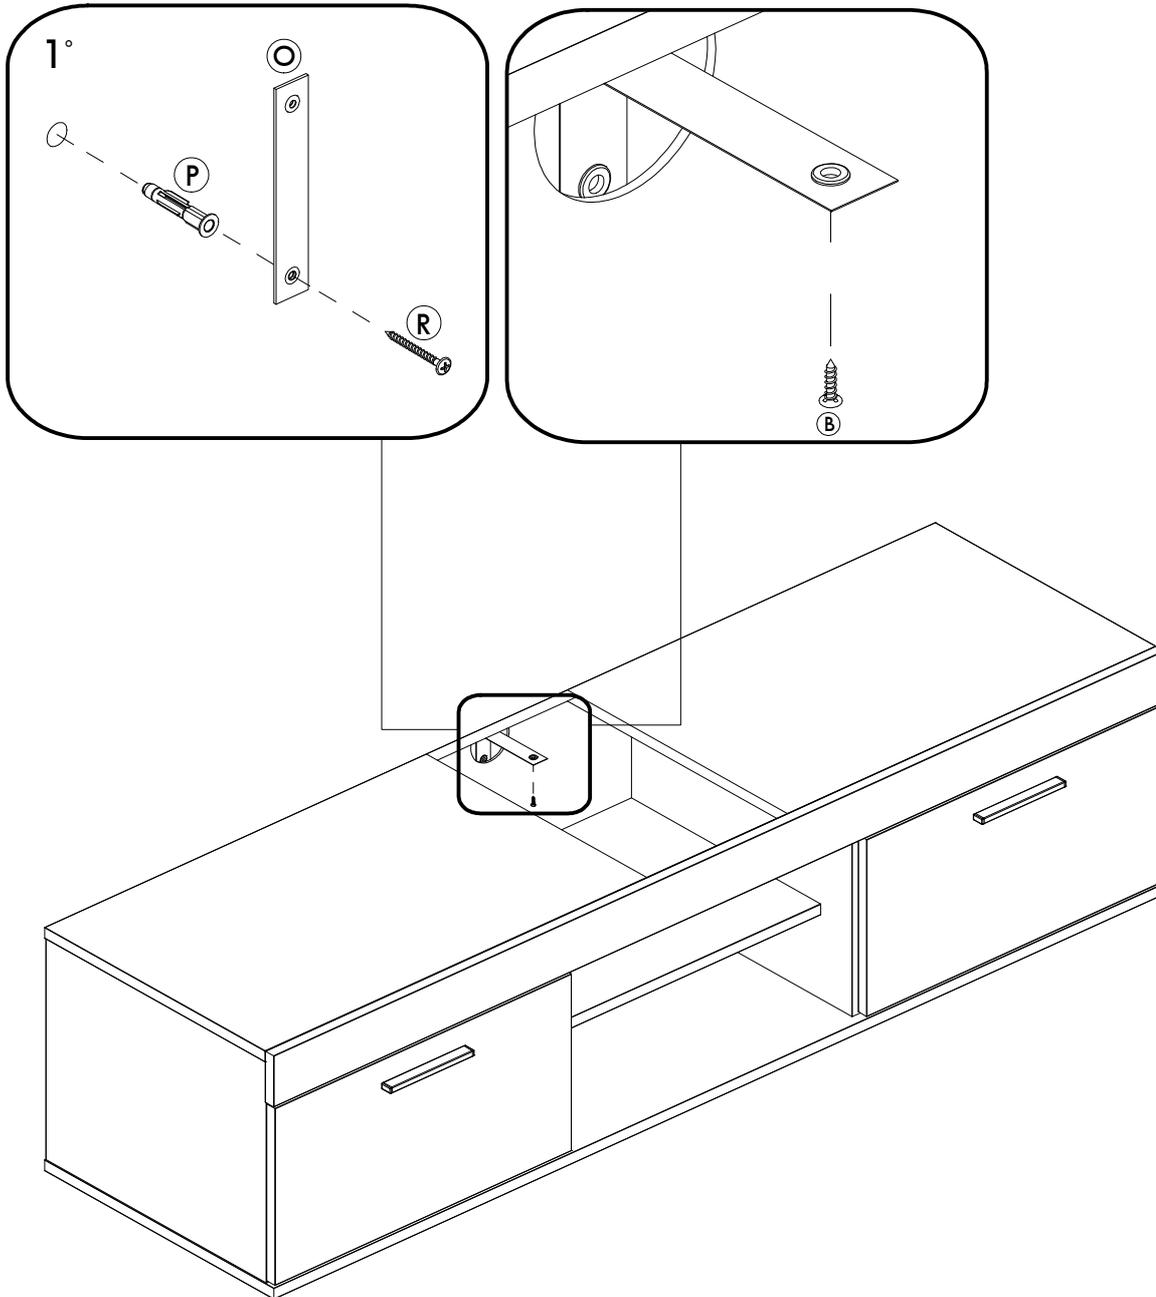

Additional Information:

- For complete product information, images and dimension diagrams please visit the website www.birlea.com
- If you have any issues with your item please contact the retailer directly you purchased it from who will be able to resolve any issues with Birlea.
- Why don't you send us photos of your assembled furniture to info@birlea.com to be shared in our #birleahome feature on Instagram.



Birlea

Suppliers of inspiration